



The Enclosure System

INSTALLATION INSTRUCTIONS

Safety:






EYE AND EAR
PROTECTION
SHOULD BE WORN
AT ALL TIMES

15m Kit Contents:	30m Kit Contents:	Gate kit contents:
· 6 Brackets	· 11 Brackets	· Inner gate frame
· 6 Ground spikes	· 11 Ground spikes	· Outer frame
· 6 Enclosure posts	· 11 Enclosure posts	· 2 stainless steel hinges
· 15m steel mesh roll	· 30m steel mesh roll	·1 magna latch
· 16m of 2m wide Poly mesh roll	· 31m of 2m wide Poly mesh roll	· 2 x 2.3m Enclosure posts (1.8m if sold with bolt downs)
· Netting pegs	· Netting pegs	· 2 x Brackets (optional)
· Selection of fixture packs in various boxes	· Selection of fixture packs in various boxes	· 2 x Bolt down ground fixings (optional) · Selection of fixtures

Tools Required:

- · Nylon hammer/mallet
- · Hole digger (for gates)
- · Wire cutters
- Screwdriver
- · Masonry drill
- · Rawl Plugs

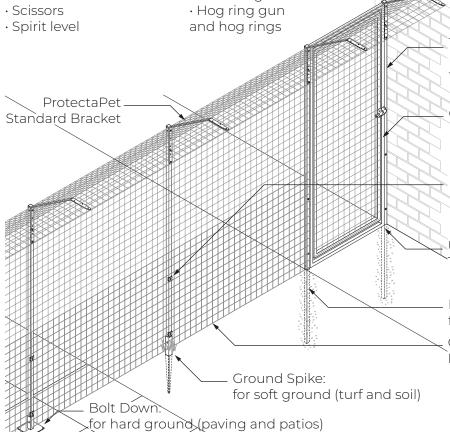

The standard wall end fixing method (without a gate) is the hook & wire frame. See step 12 & 13 for installation method

Gate

Mesh Clip


Universal Gate Posts (2.3m): To be concreted into the ground

Intermediate Post (1.8m): for use with bolt down or ground spike

Chew Guard (1m wide):


PVC Coated Steel Welded Mesh



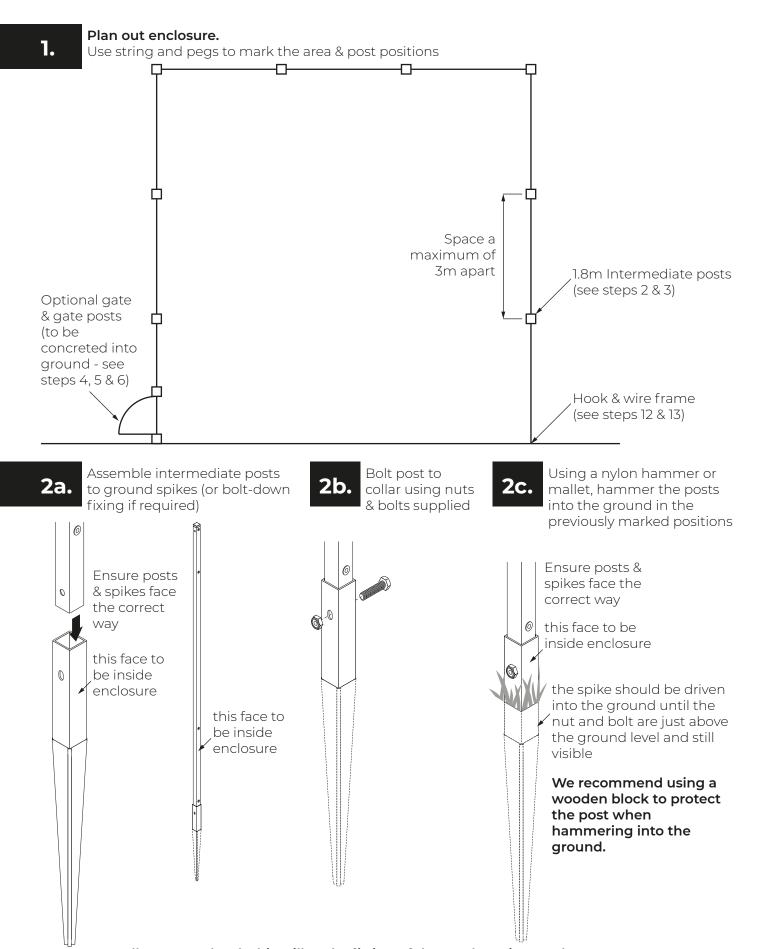


TIP: Ensure all posts are level. This will make fitting of the mesh easier at a later stage.




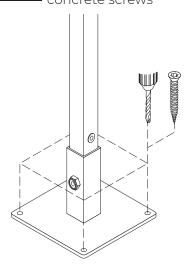


Bolt posts to either side of the gate assembly using coach bolts & nuts supplied

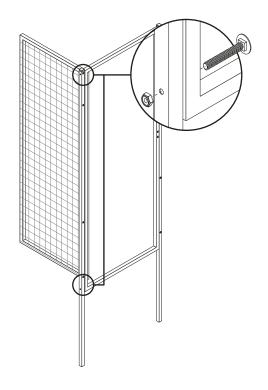

- Using a hole digger, dig holes 600mm deep for concrete type posts
- **5b.** Set gate posts in post mix concrete and leave until set hard




Attach magnetic latch to gate assembly (see instructions in latch pack)

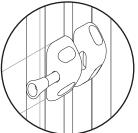

TIP: Ensure all posts are level. This will make fitting of the mesh easier at a later stage.




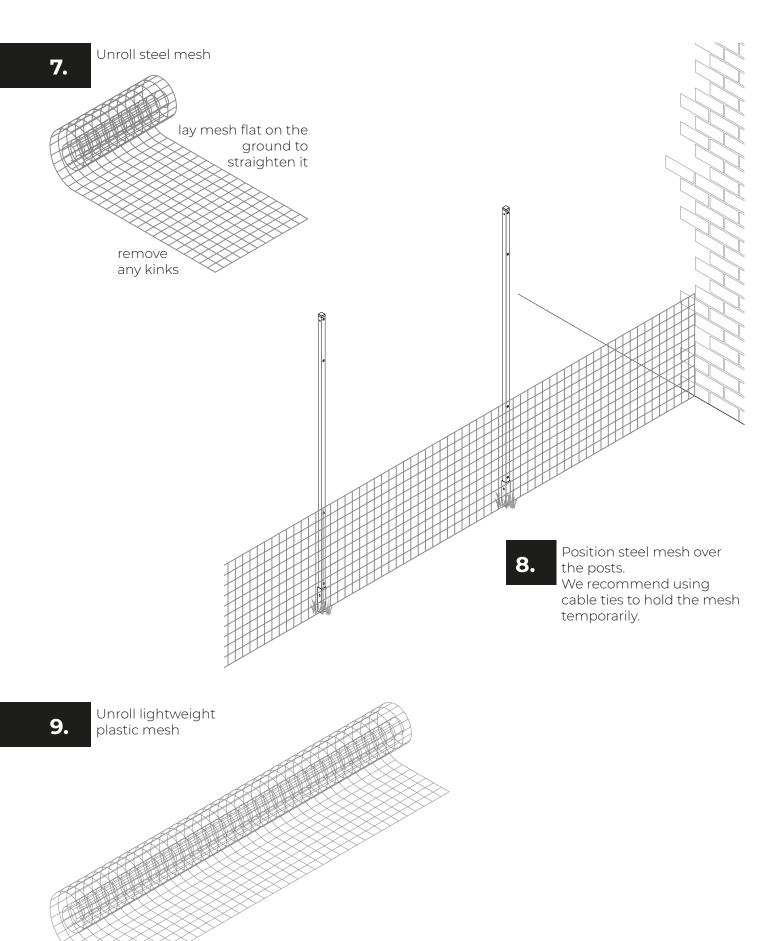



10a.


Attach a bracket to the top of the first post trapping the mesh between the bracket and the post. When stretched out the mesh should reach the tapered end of the bracket and overlap the steel mesh. See 10b and 10c below for corner variation.

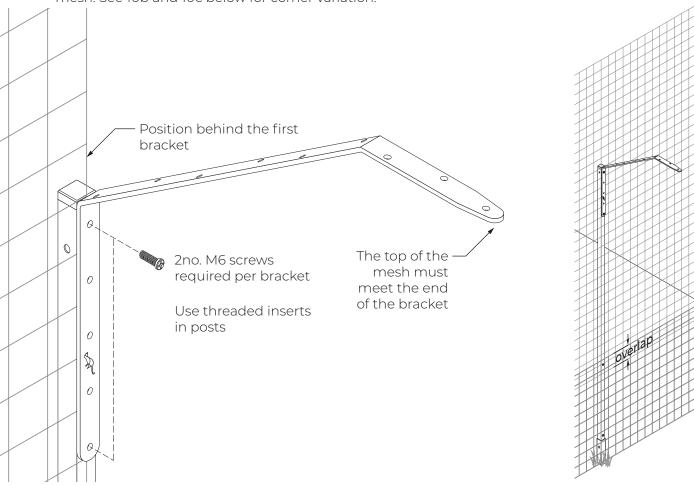

10b.

Corners:


Fix corner adaptor before fixing brackets

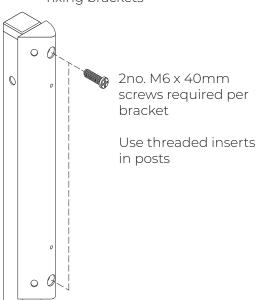


10c.


Corners:

Fix bracket to corner adaptor trapping the mesh behind the bracket (see 10a above)

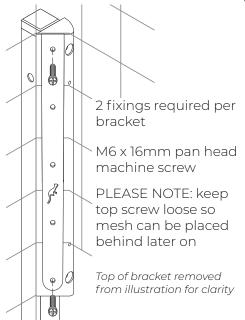



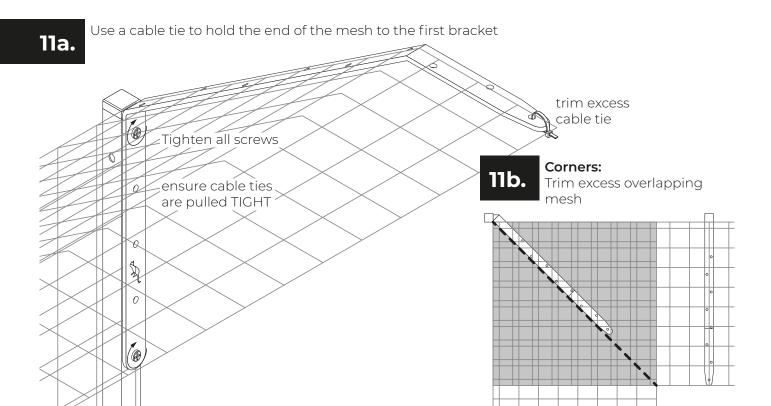


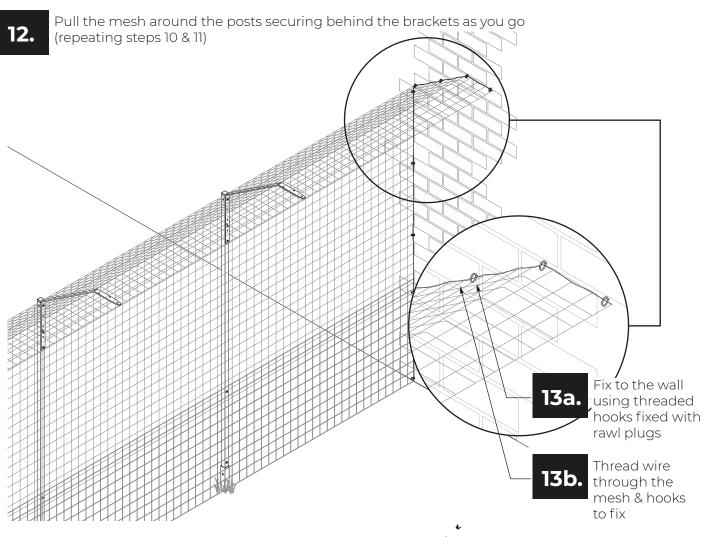




15.


Cable tie the mesh to the post

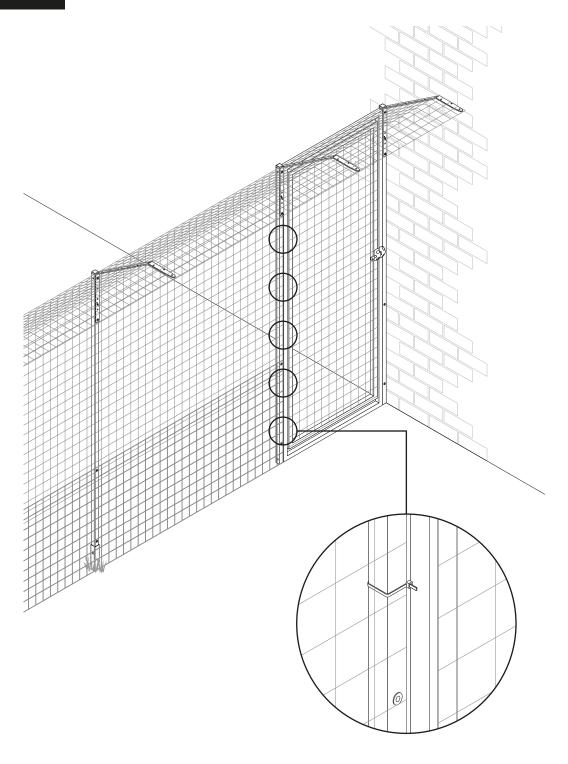



In the remaining post threaded holes, attach the mesh using mesh clips

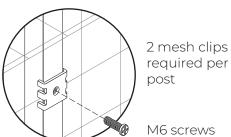


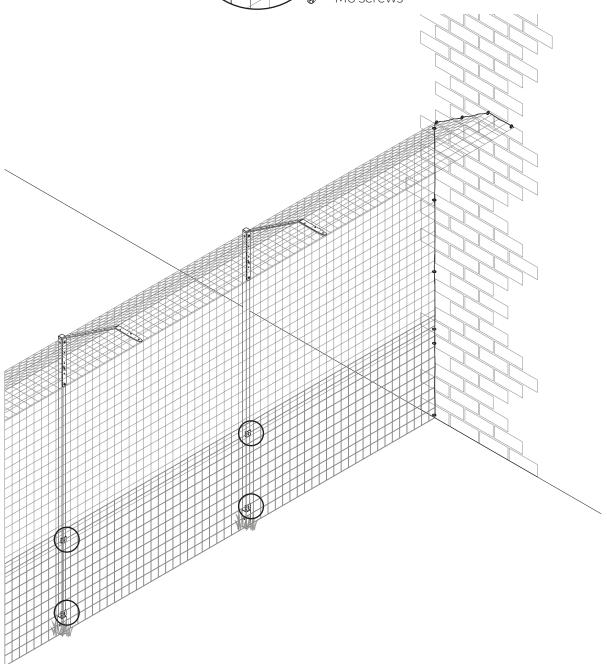


Trim any excess mesh away

17.



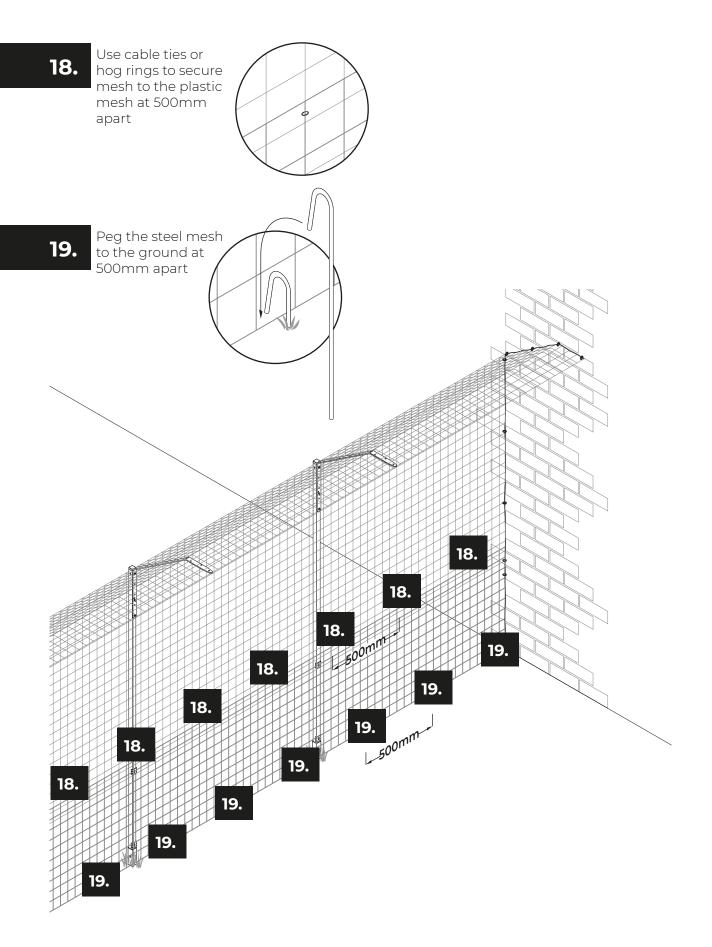



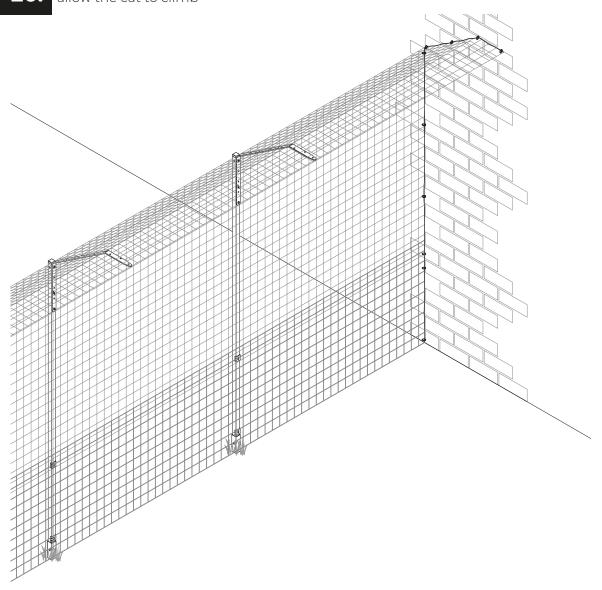

ProtectaPet cannot give a 100% guarantee of success if fitted as a DIY kit. We can offer support if you experience difficulties or need advice.







See the Enclosure System video on the protectapet YouTube channel

www.protectapet.com T: **0800 999 4008** info@protectapet.com







